

# LOC-2FTLHB-MW(110/135/160)50KD Installation Guide

SAFETY INSTRUCTIONS: Read instructions carefully before attempting to install fixture.

- All wiring should be performed by a qualified electrician.
- Disconnect power before installing or servicing. This fixture must be wired in accordance with the National Electrical Code and applicable local

#### **CAUTION: Risk of Fire**

- WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.
- WARNING: This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- **WARNING:** Always make sure the power is turned off before performing any maintenance.
- WARNING: Verify that the supply voltage is correct by comparing it with the luminaire label information.
- WARNING: All wiring connections should be capped with UL approved wire connectors.
- WARNING: To prevent wiring damage or abrasion, do NOT expose wiring to edges of sheet metal or other sharp objects to lamp holder lead wires by employing applicable connectors.
- WARNING: Do NOT use this product for other than intended use. To prevent early failure, luminaire should only be used in operation environments ranging from -20°C to 40°C.

#### **CLEANING & MAINTENANCE:**

CAUTION: Be sure the fixture temperature is cool enough to touch. Do NOT clean or maintain while the fixture is energized.

- 1. Clean lens with non-abrasive cleaning solution.
- Do NOT open fixture to clean the LED. Do NOT touch the LED.

Note: These instructions do not cover all details or variation in equipment, nor do they provide for every possible situation during installation, operation or maintenance.


#### **TROUBLESHOOTING:**

- 1. Check that the line voltage at fixture is correct. Refer to wiring directions.
- 2. Be sure the fixture is grounded properly.

#### 0-10V DIMMABLE WIRING:

Universal voltage driver permits operation at 120V through 277V, 50/60Hz. For 0-10V dimming, follow the wiring instructions. All units must be connected to AC power supply.

- 1. Connect the **BLACK** fixture lead to the (+) **LINE** supply lead.
- 2. Connect the WHITE fixture lead to the (-) COMMON supply lead.
- 3. Connect the **GROUND** wire from fixture to supply ground. DO NOT connect the **GROUND** of the dimming fixture to the output.
- 4. Connect the VIOLET fixture lead to the (V+) DIM lead.
- 5. Connect the GREY fixture lead to the (V-) DIM lead.
- 6. The driver comes with dimmable leads. If it is unused, make sure the leads are properly capped (if applicable).

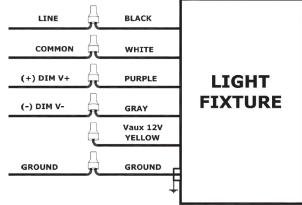

**LEDone** Phone: (844) LEDONE6 | Fax: 1-510-217-9461 | Web: www.ledonecorp.com

# LOC-2FTLHB-MW(110/135/160)50KD Installation Guide





### **MOUNTING OPTIONS:**


#### 1. V-Hook and Chain Mounting:

Cables must be connected in accordance to instruction and proper standing rules.

- Wrap the chain around the ceiling or service attachment point.
- Loop the chain around the ceiling or service point.
- Use and S or similar connector to close the loops.
- Slide the other end of the chain through the V-hook provided with the fixture.
- Install the V-hook into the two slots shown in Step 3 to support the fixture.

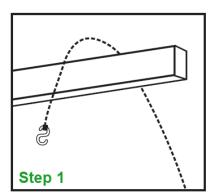


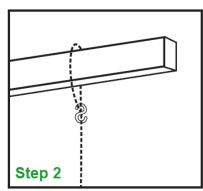

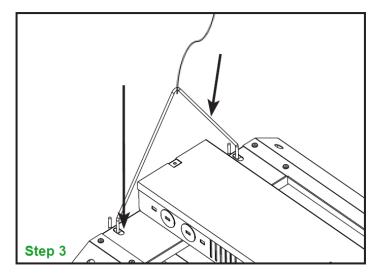

### 2. Pendant Mounting:

- Choose length of ½" NPS ped and stem (supplied by others).
- Install pendant mount kit including stem, junction box, screws and washers.
- Feed wires through the pendent stem and into the junction box.
- Wire the housing leads to supply wires using UL listed wire connectors according to NEC and local codes in the junction box.
- Push all wires back into the junction box, install the plate of box with supplied screws. Be careful not to pinch the wires.
- Slide the other end of the chain through the V-hook provided with the fixture.

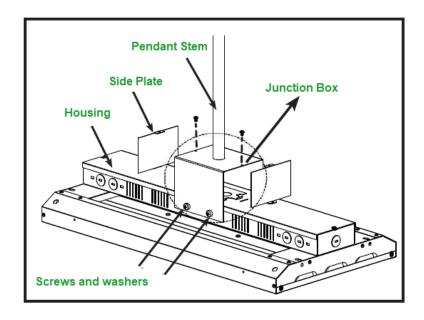

# LOC-2FTLHB-MW(110/135/160)50KD Installation Guide



## WATTAGE ADJUSTABLE TABLE SWITCH SETTING:

(Only for models with wattage adjustable functions.)

