

LEDone®

Magnetic Strip Retrofit Kit Installation Guide




Step 1:
Turn off the power to fixture before installation. Open troffer cover.




Step 3:
Open the top cover of the wiring box.



Step 5:
Take out the LED magnetic tubes from the box. Attach the LED magnetic tubes to the troffer. Adjust the position to make sure they are placed horizontally in proper place.

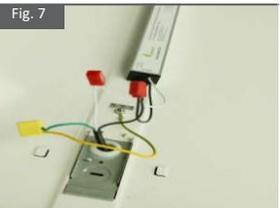

Step 7:
Connection mode of the LED driver's input wire (See Fig. 7).
White: neutral wire
Black: live wire
Yellow/Green: ground wire

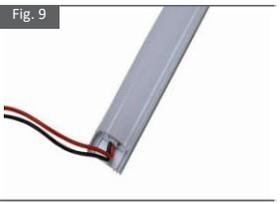

Step 9:
Connect the connection wire from the driver to the LED tubes.




Step 11:
Install the top cover of the wiring box to cover the LED driver.



Step 13:
Turn on the power and test.



Step 2:
Take out the fluorescent tubes one by one.

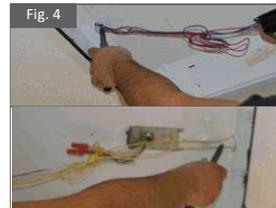

Step 4:
Dismantle the ballast and circuit of the fluorescent tubes.



Step 6:
Take out the LED driver and screws. Fix the driver onto the position of the previous ballast.



Step 8:
Connect the connection wire to the output terminal of the LED driver.



Step 10:
Finish all connections between the LED driver and the LED strips.



Step 12:
Close the cover.

WARNING:

- 1) Please cut off the power before beginning any installation or maintenance.
- 2) Please strictly follow the operation rules and use the right tools when installing.
- 3) The lighting fixtures should only be installed, connected and/or tested by a licensed electrician.