

LEDone®

LOC-LWAL Series Installation Guide

SAFETY INSTRUCTIONS: Read instructions carefully before attempting to install fixture.

- All wiring should be performed by a qualified electrician.
- Disconnect power before installing or servicing. This fixture must be wired in accordance with the National Electrical Code and applicable local codes and ordinances.
- Proper grounding is required to ensure personal safety.

CAUTION: Risk of fire

- **WARNING:** Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.
- **WARNING:** Risk of shock when photoelectric switch is provided.
- **WARNING:** Please check if the voltage marked on the luminaire is consistent with the input voltage to be connected.
- **WARNING:** Do NOT use in an area with strong acid mist.
- **WARNING:** Make sure the installation position can withstand 10 times the weight of the luminaire before installing.
 - Install it at a flat place without vibration, swinging or fire hazards.

CLEANING & MAINTENANCE:

CAUTION: Be sure the fixture temperature is cool enough to touch. Do NOT clean or maintain while the fixture is energized.

1. Clean glass lens with non-abrasive glass cleaning solution.
2. Do NOT open fixture to clean the LED. Do NOT touch the LED.

Note: These instructions do not cover all details or variation in equipment, nor do they provide for every possible situation during installation, operation or maintenance.

TROUBLESHOOT:

- If the light will not come on:
 - **A.** Light switch is turned off. Turn light switch on.
 - **B.** Fuse is blown, or circuit breaker is turned off. Replace fuse or turn circuit breaker on.
 - **C.** Incorrect circuit wiring. Verify that fixture is wired properly.

WIRING:

Universal voltage driver permits operation at 120V through 277V, 50/60Hz. Follow wiring directions as in Fig. 1.

1. Connect the BLACK fixture lead to the (+) LINE supply lead.
2. Connect the WHITE fixture lead to the (-) COMMON supply lead.
3. Connect the GROUND wire from fixture to supply ground.

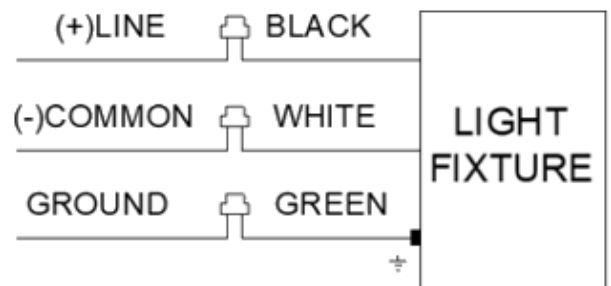


Fig. 1

0-10V DIMMABLE WIRING:

Universal voltage driver permits operation at 120V through 277V, 50/60Hz. A 5-wire cord is provided. For 0-10V dimming, follow the wiring instructions in Fig. 2.

1. Connect the BLACK fixture lead to the (+) LINE supply lead.
2. Connect the WHITE fixture lead to the (-) COMMON supply lead.
3. Connect the GROUND wire from fixture to supply ground. Do NOT connect the GROUND of the dimming fixture to the output.
4. Connect the PURPLE fixture lead to the (V+) DIM lead.
5. Connect the GRAY fixture lead to the (V-) DIM lead.
6. Cap the YELLOW fixture lead, if present. Do NOT connect.

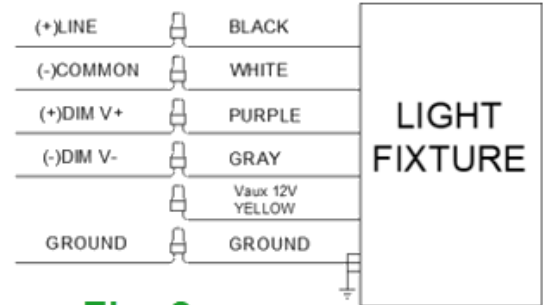


Fig. 2

MOUNTING:

1. **SLIP FITTER MOUNTING:** Follow mounting directions as in Fig. 3 to 4
 - a. Attach the lamp arm to the lamp.
 - b. Connect the input wire and install the lamp on the lamp post. After lengthening the input wire, meet the height requirement of the light pole and connect the wire at the bottom of the light pole.


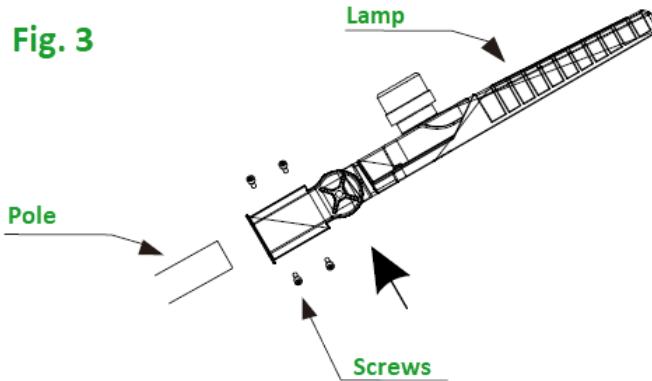


Fig. 3

Fig. 4

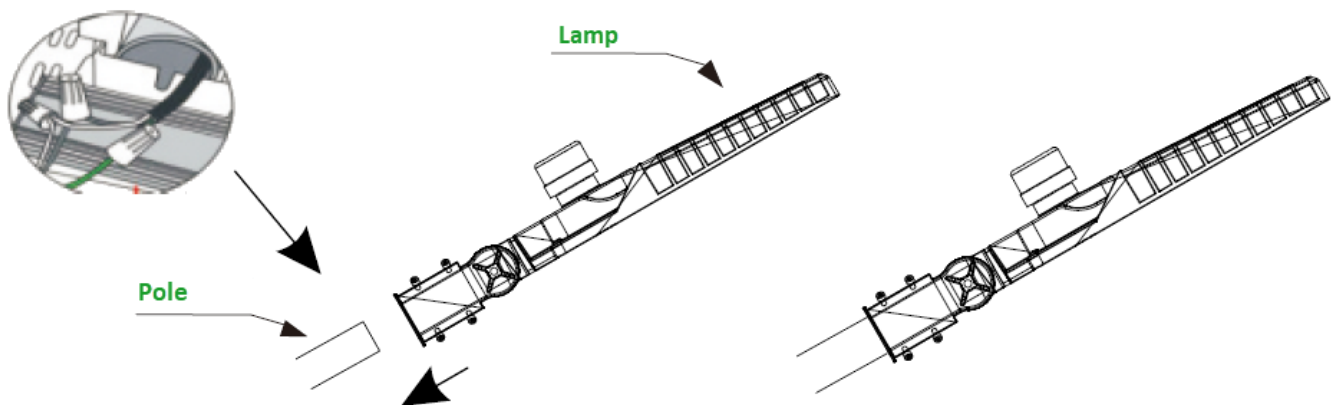

- 2. SURFACE MOUNTING:** Follow mounting directions as in Fig. 5 to 7
- Install the trunnion in the proper position of the lamp pole.
 - Install the light fixture on the trunnion.
 - Wire at handhold on the pole. After the power cord is connected, put it inside the lamp post.

Fig. 5

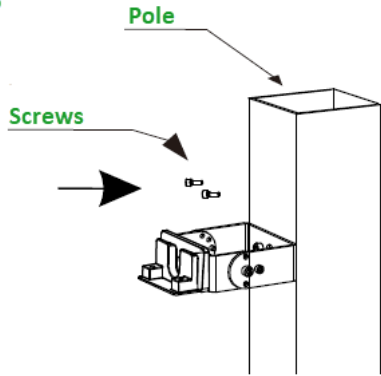


Fig. 6


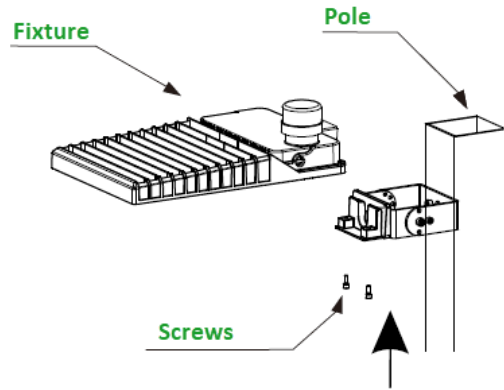


Fig. 7

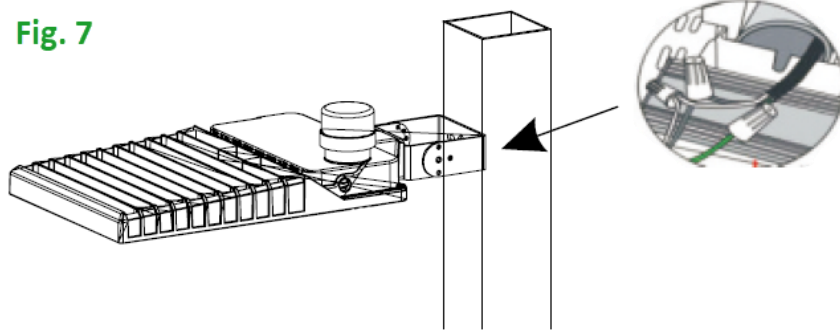

- 3. EXTRUDED ARM / SLIP FITTER EXTRUDED ARM MOUNTING:** Follow mounting directions as in Fig. 8 to 10

- Install the arm in the proper position on the pole.
- Install the light fixture on the arm.
- Complete wiring at handhole on the pole.

Fig. 8

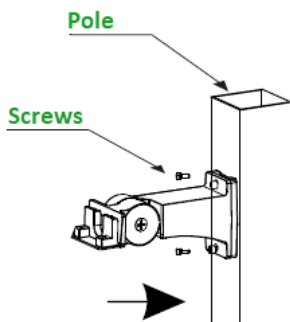


Fig. 9

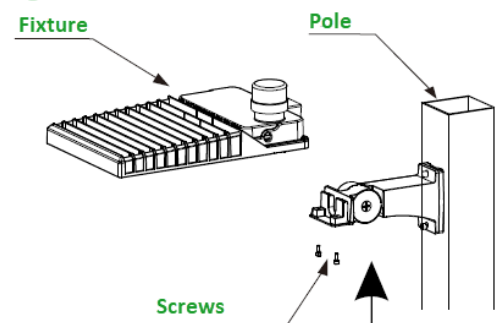


Fig. 10

